



Eonian Care

### Electric Bottle Steriliser and Dryer

Instruction Booklet



EC 502

1

### DEAR PARENTS.

Congratulations on the purchase of your new Eonian Care Electric Bottle Steriliser and Dryer. Hygiene is surely a priority in a household with newborns, as their immune system is not fully developed. With Eonian Care Electric Steriliser and Dryer, bottle-feeding has never been easier. Our open-designed steriliser uses natural steam to sterilise feeding bottles and accessories, killing 99.9% of harmful germs without using any sort of chemicals. It can even keep all the bottles, teats and other accessories germ-free for up to 24 hours if the lid remains unopened.

Unlike traditional air-dry or towel-dry, which may contaminate the sterilised items, the unique drying function built in Eonian Care Steriliser gives all bottles and accessories a warm drying up and leave them ready for use. We are also proud to introduce the HEPA air filter to keep the air pollutants outside of the steriliser when drying bottles up. Once sterilising and drying has been completed, the appliance switches off immediately, saving energy as well as giving you peace of mind. The container is space saving and holds up to 8 bottles plus accessories at the same time. Raising a baby is safer and easier with Eonian Care.

With love,  
Eonian Care



displays a 30 minutes countdown with the 'Sterilising' indicator flashes. Press one more time, the drying time adds up 10 minutes and the LED displays 40 minutes. Press two more times the LED displays 50 minutes. The maximum drying time is 50 mins. Press one more time to return to default setting (30 minutes). You can choose the time according to your own needs.

3. After the 'Sterilising' indicator flashes for five seconds, the device starts operating with the selected time countdown and the 'Drying' indicator lights up.

4. When the sterilisation process is finished, the heating base stops heating with a beeping sound. The appliance switched off immediately.

### Mode 3: Steriliser+dryer

1. Before sterilisation, it is important that all bottles and accessories are washed, completely rinsed with fresh water and emptied.

2. Pour 90ml water into the water reservoir of the base, put the feeding bottles upside down into the container. Place the teats and other feeding accessories on the accessory tray and cover the lid. Put the plug in the wall socket and press 'Turn on/off' symbol on the control panel. The appliance is switched on to standby status.

3. Simply touch the 'Sterilising/Drying' symbol on the control panel once, the LED displays a 50 minutes countdown (Sterilising 10 minutes + drying 40 minutes). With one more touch the LED shows 60 minutes (Sterilising 10 minutes+ drying 50 minutes). Press three times in a row the LED displays 40 minutes (sterilising 10 minutes+ drying 30 minutes). You can choose the time according to your own needs.

4. After the 'Sterilising/Drying' indicator flashes for five seconds, the device starts operating with the selected time countdown and the 'Dryer' indicator lights up.

5. When the sterilisation process is finished, the heating base stops heating with a beeping sound. The appliance switched off immediately.

8

### KINDLY REMINDER

- Add the right amount of water. Contents may not be properly sterilised if the water is not enough. Too much water will damage the appliance.

- Dry burn prevention: If there is not enough water in the water reservoir, the appliance will stop working immediately.

- Wash your hands before handling sterilised items.

- Take care when handling sterilised items as they may be hot. Using the tongs is recommended.

- Do not open the lid of the device during working conditions as it contains boiling water and steam. If you need to stop the appliance, simply touch the 'Turn on/Off' symbol. Wait for at least 5 minutes before opening the lid to prevent steam burning.

- Always unplug the steriliser from the mains when not in use.

- After each use, pour away any remaining water from the device and wipe dry using a non-abrasive cloth.

- Do not use chemical sterilising solution or tablets.

- Do not touch or move the steriliser while it is operating.

- Do not leave the appliance where children can reach it.

- Do not sterilise metallic items.

9

### FEATURES

- **Safety-frst:** BPA free PP material. Automatically switches off when drying up. Built-in HEPA air filter.

- **Efficient:** you can sterilise up to 8 bottles plus accessories at the same time.

- **Ultra Hygiene:** sterilising and drying 2 in 1.

- **Easy:** The digital LED display with stylish touch buttons keeps you informed throughout the sterilising or drying cycle.

### SPECIFICATION:

Voltage: 230V  
Hertz: 50Hz  
Rate Power: 600W

Please read through the instructions before using and save it for future reference.

For household uses only.

### CLEANING INSTRUCTIONS

- Always clean the bottles and accessories before put them into the sterilising container. The milk or any nutritional waste in the bottles or accessories could damage the device.

- After each use, allow the device to cool down for approx. 10 minutes. Always pour away remaining water from the heating base and wipe dry.

- Do not use abrasive scouring pad to clean the steriliser.

- Do not immerse the power cord, power plug and power base in water, make sure that the cord and the plug are dry.

- Clean/change the HEPA air filter every six month.

### DESCALING INSTRUCTIONS

When you use the steriliser, scale may build up on the heating element in the water reservoir. The harder the water, the faster scale builds up. Descale the appliance every one or two weeks to ensure that it works effectively.

- Pour 40ml of white vinegar (5% acetic acid) mixed with 50ml of water into the water reservoir.

- Turn the sterilisation mode on and turn off the device before the water is dried.

- Drain and rinse thoroughly. Wipe dry.

10

### DANGER - MUST READ BEFORE USE

- This appliance is not intended for use by persons (including children) with limited physical, sensory or mental abilities or with insufficient experience and/or insufficient knowledge, unless the person concerned is either supervised by a person responsible for his/her safety, or receives instructions from this person as to how to use the equipment.

- Keep the appliance and its cord out of the reach of children. Children should be supervised near the appliance in order to ensure that they do not play with the device.

- Do not immerse the appliance in water or any other liquid.

- Do not disassemble, open or repair the appliance yourself to avoid the risk of electric shock.

- Check your electrical voltage before you connect the appliance.

- Do not use the appliance if the plug, the mains cord or the appliance itself is damaged.

- During sterilisation, steam that comes out of the vent in the lid may cause burns.

- Do not touch the appliance during or shortly after sterilisation because they are very hot.

- Never cover the appliance when it is switched on.

- Do not use detergents/bleach/chemicals or put the appliance in a dishwasher.

- Please read the Descaling Instructions carefully. Failure to follow the descaling instructions may cause damage.

4

### CAUTION

- Do not leave the device unattended when in use.

- Please understand that any claim under warranty will be declared void if accessories or parts are used are not recommended in these operating instructions or, in the case of repairs, if original parts are not used exclusively. This also applies to repairs undertaken by non-qualified persons.

- Always store and use the appliance on a firm, dry, cool, and even surface. Do not expose the equipment to extreme heat or direct sunlight.

- Always let the appliance cool down before you move or store it.

- Always disconnect and pour remaining water out of the appliance after use and only do it when the appliance has cooled down.


- Do not use the appliance if it has fallen or is damaged in any way. Call Eonian Care Service Centre for repair or replacement.

- Environmental conditions, such as temperature and altitude, may affect the functioning of this appliance.

Avoid the use of extension leads. The extension lead can only be used if it is not damaged and/or no other equipment is plugged into the socket at the same time.

5

### GENERAL DESCRIPTION

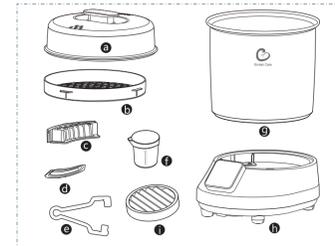


Serial number	Name	Material	Heat-resisting temperature	Cold-resistance temperature	Quantity
0	0	0	0	0	0
a	Manual opening lid	Polypropylene (PP)	120°C	-20°C	1
b	Accessory tray	Polypropylene (PP)	120°C	-20°C	1
c	Air inlet port	Polypropylene (PP)	120°C(PP)	-20°C(PP)	1
d	Cover plate	Polypropylene (PP)	120°C	-20°C	1
e	Tongs	Polypropylene (PP)	120°C	-20°C	1
f	Measuring cup	Polypropylene (PP)	120°C	-20°C	1
g	Container	Polypropylene (PP)	120°C	-20°C	1
h	Basis with control panel	Polypropylene (PP)	120°C	-20°C	1
i	Filter	HEPA activated carbon			1

NB: Please remove the protective film on the control panel before first use.

6

### THERE ARE FOUR MODES FOR YOUR CONVENIENCE



### Mode 1: Steriliser

1. Before sterilisation, it is important that all bottles and accessories are washed, completely rinsed with fresh water and emptied.

2. Pour 90ml water into the water reservoir of the base, put the feeding bottles upside down into the container. Place the teats and other feeding accessories on the accessory tray and cover the lid. Put the plug in the wall socket and press 'Turn on/off' symbol on the control panel. The appliance is switched on to the standby status.

3. Simply touch the 'Sterilising' symbol on the control panel, the LED displays a 10 minutes countdown with the 'Sterilising' indicator light. The appliance then starts operating. When the sterilisation process is finished, the heating base stops heating with a beeping sound. The appliance switched off immediately.

4. When finished, please wait until the remaining water in the heating base cools down and pour it out.

### Mode 2: Dryer

1. Put the feeding bottles upside down into the container. Place the teats and other feeding accessories on the accessory tray and cover the lid. Put the plug in the wall socket and press 'Turn on/off' symbol on the control panel. The appliance is switched on to the standby status. No water is required in the drying mode.

2. Simply touch the 'Drying' symbol on the control panel once the LED

7

### 2 YEAR REPLACEMENT WARRANTY



At Eonian Care, quality is at the forefront when designing and manufacturing our products, and that is why we proudly provide our valuable customers with a 2 year replacement warranty.

When used with care and observing the operating instructions, Eonian Care will guarantee the product for 2 years from the date of purchase. The end users of our products are entitled to a replacement for a major failure (material or design fault) free of charge. Any damage resulting from improper use of the device will not be rectified. Mains cord and plugs are excluded from the warranty. If caused by wear, if the product includes a number of accessories, only the defective part will be replaced. You are also entitled to have the device repaired if the failure does not amount to a major failure. Eonian Care reserves the right to make minor adjustment instead of replacing the product or accessory. All costs are to be clarified in advance. In the event of a product or accessory being replaced/repair, the warranty will expire 2 years from the purchase date of the device, not 2 years since the date of replacement/repair.

When claiming for warranty, a proof of purchase must be enclosed with the product at all times. The name and address of the retailer/supplier, the date and the time of purchase and the model number need to be clearly displayed on the proof of purchase. Without proof of purchase you will be charged. Your warranty is valid only in the country of purchase.

The Eonian Care 2 year replacement warranty excludes defects caused by the product not being used according to the instructions, accidental damage, misuse, breakables such as glass and ceramic items, consumable items and normal wear and tear. The 2 year replacement warranty does not

apply to the devices which are used for commercial purposes. Should you have any questions, ideas, or concerns, please contact our customer service centre on:

Eonian Care Customer Service Centre Australia  
PO BOX 167  
ERMINSTON NSW 1700  
T: 02 6984 4193 Monday to Friday: 9:00 - 17:00 (AEST) Close on NSW public holidays  
Email: customerservice@eoniancare.com.au

OR click on [www.eoniancare.com.au](http://www.eoniancare.com.au) for more information and support.



Eonian Care

Your smart baby solutions

Specifications are subject to change without notice. Trademarks owned by Eonian Trading Pty Ltd All Rights Reserved.

14



11



12

13